

WINCH INSTALLATION & OPERATION INSTRUCTIONS

Inspect entire pole shaft and all welded connections for any damage that may have occurred during the shipping or handling process, do not install any poles that are damaged and notify CameraPoles.org.

Make sure that hinge pin is located in the center of the hinge assembly with the snap rings locked securely in the grooves at the ends of the pin prior to installation.

Electrical wiring must pass through the wire protection sleeve located in the hinge assembly to prevent damage to the wire insulation during the raising and lowering process. Failure to observe this rule can cause electrocution.

All tenon mount poles must be field drilled to install the factory supplied thru-bolt located in the bracket slipfitter. Failure to install the thru-bolt can result in a serious injury or death.

Winch Installation

Please refer to the drawing below.

- Attach winch cable to the cable eyelet on the shroud with provided clevis.
- Keep the cable taut at all times to insure that the lowering and raising operation remains smooth and prevents any unnecessary jolts to the shaft extension shroud.
- Refer to the Winch Manufacturers Instruction Pamphlet for the recommended operation procedure.

Pole Lowering Instructions


Note*** TO PREVENT INJURY OR MATERIAL DAMAGE NEVER LOWER POLES IN ADVERSE WINDY CONDITIONS.

Pole Lowering Procedure

Make sure that the clevis is attached to the winch cable eyelet and the cable is tight. Remove the shroud locking nut to allow the channel to be lowered. Make sure that the cable is in the center of the bottom part of the shroud before lowering. To start the lowering process, rotate the winch handle clockwise while pushing the shroud away from the lower section. Once the hinging process starts under its own load continue lowering the cable slowly until the top of the pole is at the desired position.

Pole Raising Procedure

When the installation of the camera or the maintenance of the camera is complete, rotate the winch handle counter-clockwise until the pole is in the upright position. Push the shroud down over the locking bolt and screw the locking nut tight with a wrench. Disconnect the winch cable from the eyelet and remove the winch from the pole.

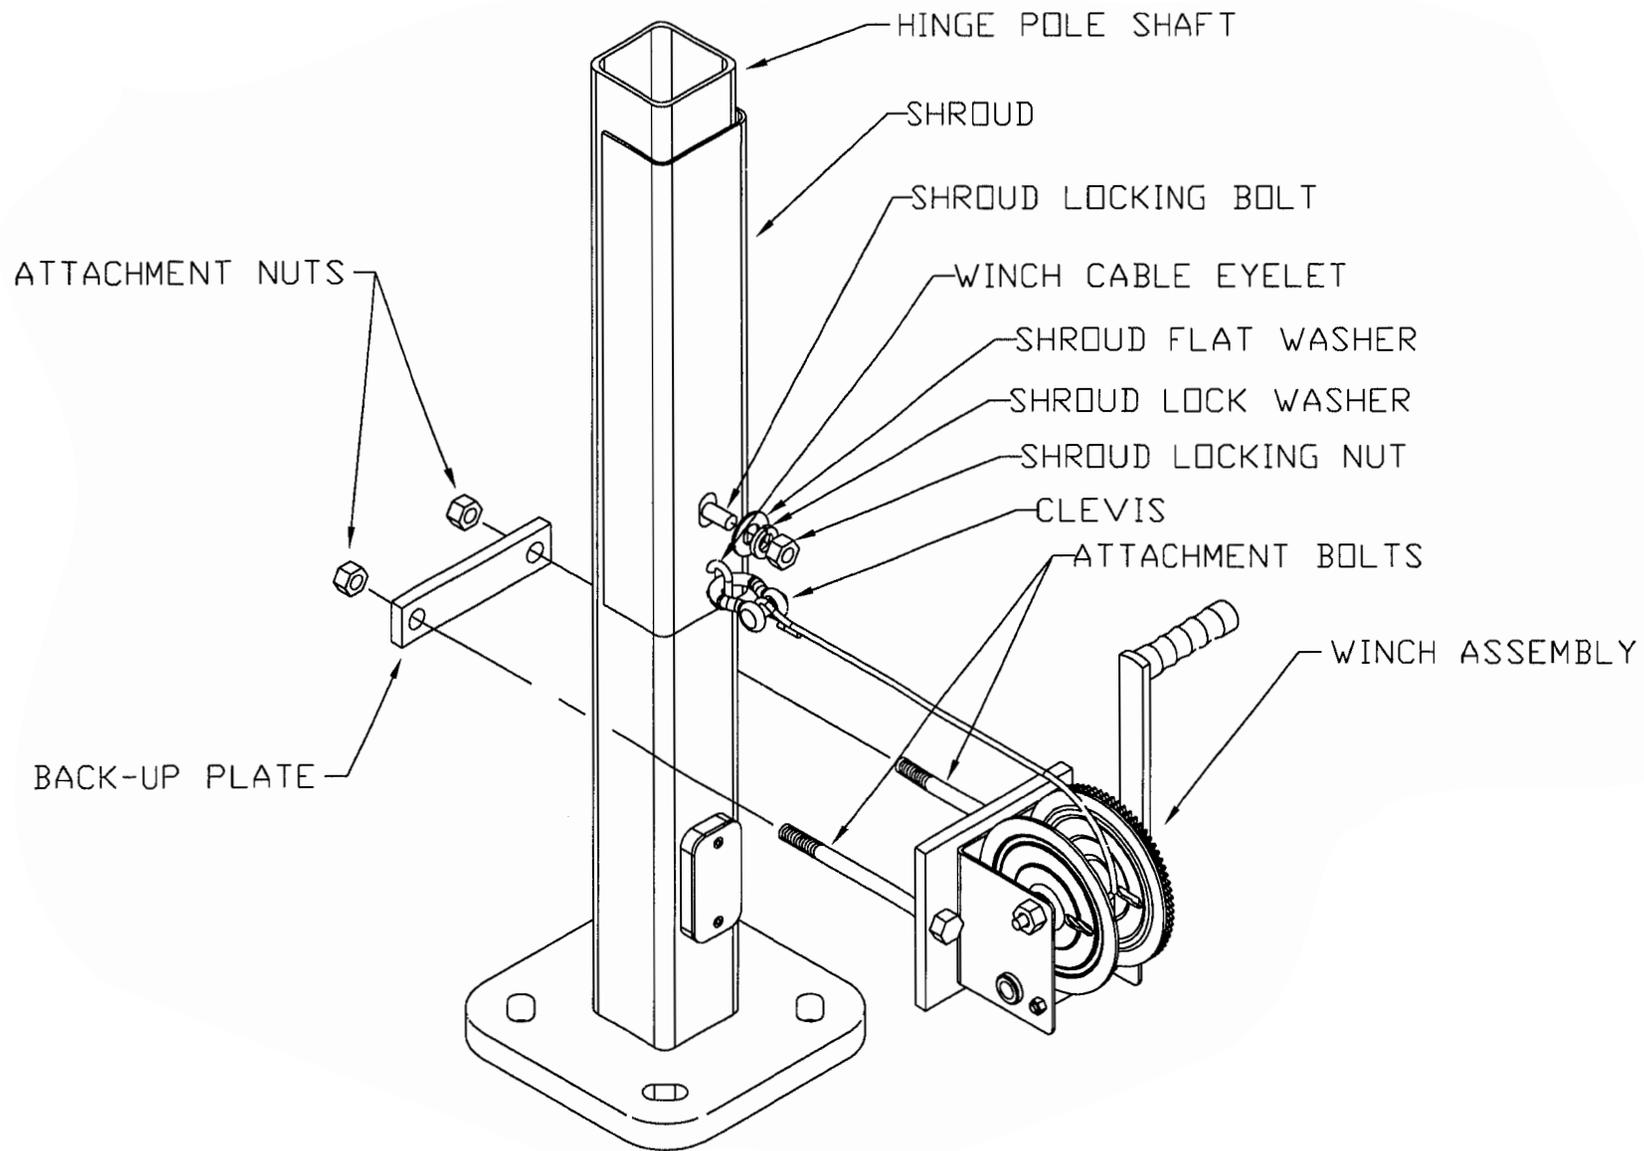

MIDDLE-HINGED CAMERA POLE DETAIL VIEW

www.CameraPoles.org
 (888)364-8802